



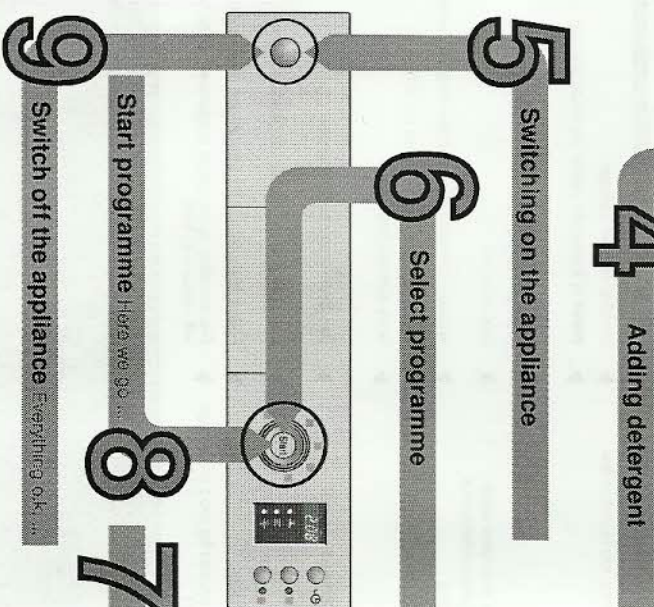

😊
 Alert and handy:
 everything your dishwasher
 needs ...
 Before using for the first time,
 read the installation instructions
 and Operating Instructions!

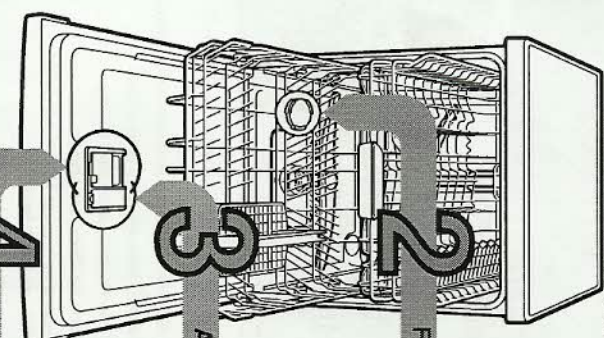


1

Adjusting the water softening system *

Ask your water supply company what the water hardness is and enter ...

Water hardness Value °dH/Clark	Hardness range	mmol/l	Factory setting
0-8	soft	0-1.1	H00
9-10	soft	1.2-1.4	H01
11-12	medium	1.5-1.8	H02
13-15	medium	1.9-2.1	H03
16-20	medium	2.2-2.9	H04
21-26	hard	3.0-3.7	H05
27-38	hard	3.8-5.4	H06
39-62	hard	5.5-8.9	H07

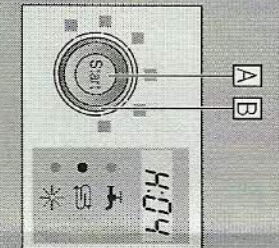


Quickly sorted ...


How to adjust

- Switch on ON/OFF switch.
- Press and hold down the START button A.
- Rotate programme selector B until H01...9 is indicated on the digital display.
- Release button.
- The factory set value H04 is on the digital display.
- Rotate programme selector B until the required value is indicated on the digital display.
- Press START button A.
- The set value is saved.

2 Filling the salt dispenser

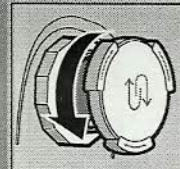


Open the lid.

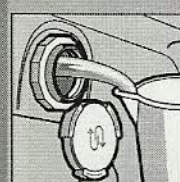


Only fill the salt dispenser with water before the first wash.

For optimal washing results

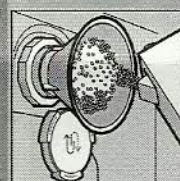


Add special salt (never use detergent!).

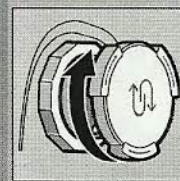

Close the lid. Rinse immediately.


3 Adding rinse aid

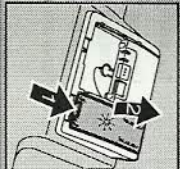

Gets it sparkling clean ...
 Press parking 1, lift lid 2.



For optimum drying results

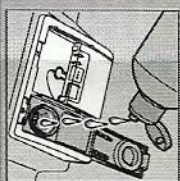


Add rinse aid.




Close lid. QUICK!



4 Adding detergent

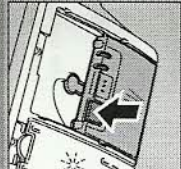


A lot of dirt, a lot of detergent ...
 If required, open the cover (press button).

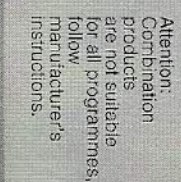

Attention: Combination products are not suitable for all programmes. Follow manufacturer's instructions.

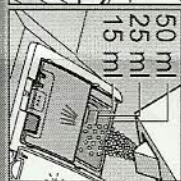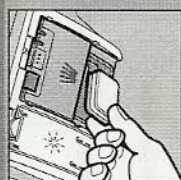

Pour detergent into the dry detergent dispenser only.

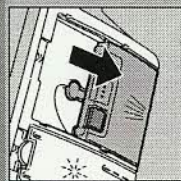

Slide cover shut. Press PLOP!

5 Switching on the appliance

6 Select programme

Quick, economical or intensive ...

Overview of programmes
 The max. possible number of programmes is illustrated in this overview. The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 60436. Deviations are possible in practice.
 * half normal load

Programme	Intensive 70°	Auto 45°/65°	Eco 50°	Glass 40°	Quick 45°	Pre-rinse
Duration h/s/mins	3:30-1:25	3:30-1:25	3:30-1:25	3:30-1:25	0:29*	0:15
Energy consumption in kWh	1,600-0,750	1,600-0,750	1,600-0,750	1,600-0,750	0,800	0,050
Water consumption in litres	19-9	19-9	19-9	19-9	10	4

Additional options **

Express WashPlus/Speed Perfectus (VarioSpeedPlus)
 ... is obtained by increased energy consumption at a constant cleaning performance.

1/2 Half load
 ... for a few items, saves water, energy and time.

Flexibility ...

Intensive zone
 ... perfect for a mixed load. Washing pressure and washing temperature are increased slightly.

HygienePlus
 ... the temperature is increased during the final rinse process. This increases the hygiene status.

Extra drying
 ... improves the drying result by increased temperature in the final rinse. (Please take care with delicate dishes.)

** depending on model

