

Kenwood Electric Coffee Maker

Manufacturer's instruction book not available


To operate:

Use the jug to pour sufficient cold water into the top of the machine (the back part of the top of the machine flips up for access).

Press the button at the top right of the front of the machine to access the compartment for the filter and ground coffee. Place the filter in the holder. Add the required amount of ground coffee and close the machine. Take care in pushing the holder back into the machine that the edges of the filter do not get folded over the coffee. This can lead to the water by-passing the coffee and very disappointing results!

To start the brew cycle turn on at the switch at bottom left.

We find that water up to the 10 cup mark (larger scale, c 14-15 on smaller scale) in the jug and three heaped dessert spoons of ground coffee in the filter make a good recipe.

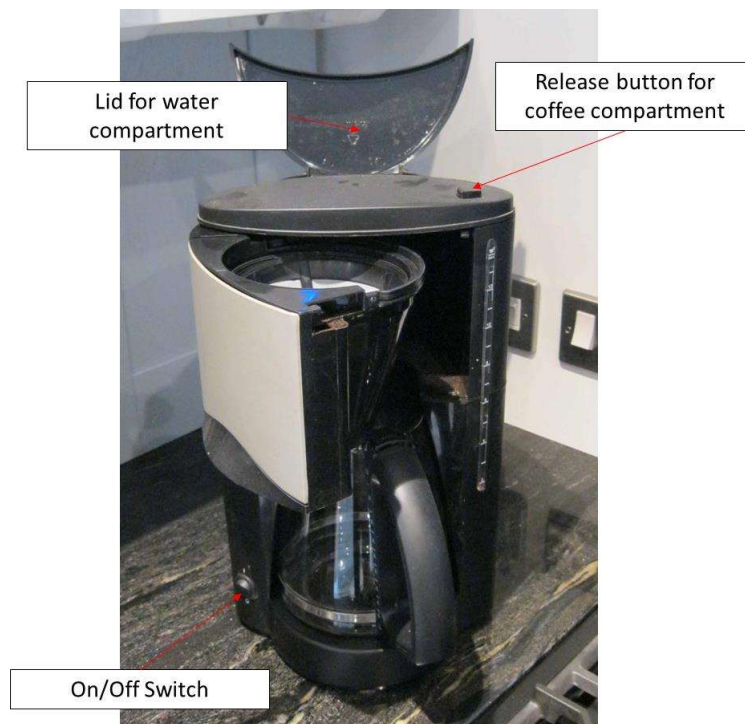

Once coffee has brewed, leave the machine switched on to keep the coffee warm, but do remember to turn off when the coffee is finished. Please rinse any dregs out immediately or the coffee will dry onto the inside of the flask and spoil the next brew.

Safety: beware of hot parts and the hot coffee. Do not immerse the unit to clean it, even if unplugged. The jug and the two parts of the coffee-holding-basket can be removed for cleaning in the dishwasher, if required.