

# Swan Vintage

designed for life



## Kettle

Models: SK261050 (all models)

Helpline: **01733 404703**

v1.1



### IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- DO NOT IMMERSE IN WATER



## TECHNICAL DATA

Description: Kettle  
Model: SK261050 [all models]  
Input Voltage: 220-240V  
Frequency: 50/60Hz  
Power consumption: 2500-3000 Watts



Swan 3



## HOW TO USE

### Before first use

Remove all packaging

It is important to ensure the correct plug adaptor is used when operating in a country not using the UK 13 Amp socket system. If in doubt, consult a qualified electrician.

Fill the kettle with water via the spout. You can also fill the kettle by lifting the locking lid. Ensure the lid is firmly closed after filling.

Check that the water level is between the MIN and MAX lines on the water gauge.

PLEASE DO NOT OVERFILL THE KETTLE PAST THE MAX LEVEL. DOING SO POSES A SCALDING RISK.

Place the kettle on its base, Connect the plug to the mains supply and press the power switch down

The kettle will switch itself off once the water has boiled

**If this is the first time you have used the kettle, discard the water from the first boiling.**



## CLEANING & MAINTENANCE

This product requires very little maintenance. However, if you live in a hard water area, it will be necessary to de-scale the kettle from time to time.

Most supermarkets sell de-scaling tablets, powders or liquids.

These are inexpensive, easy to use and perfect for ensuring your kettle provides many years of faithful service.

An excessive build up of limescale will damage your kettle and increase the boiling time/electricity consumption!

For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.

**DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER**

**ALWAYS ENSURE THE PRODUCT IS UNPLUGGED FROM THE MAINS SUPPLY AND COMPLETELY COOL BEFORE CLEANING.**