



# DVD/Blu-Ray/CD/Data Disc/USB Player

## Front Panel

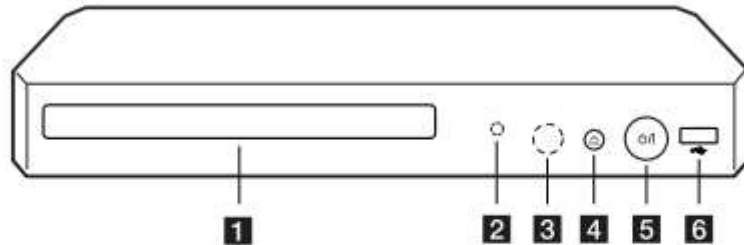

- |                          |                           |
|--------------------------|---------------------------|
| <b>1</b> Disc Tray       | <b>4</b> △ (OPEN / CLOSE) |
| <b>2</b> Power Indicator | <b>5</b> ⏻ / ⏻ (POWER)    |
| <b>3</b> Remote Sensor   | <b>6</b> USB Port         |

## Remote Control

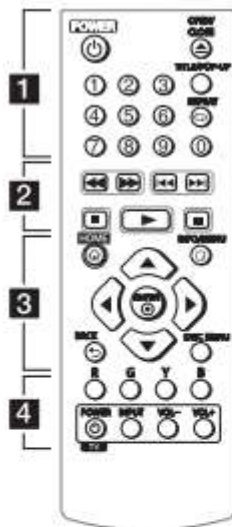

..... **1** .....

⏻ (POWER): Switches the player ON or OFF.

△ (OPEN/CLOSE): Opens and closes the disc tray.

**0-9 numerical buttons:** Selects numbered options in a menu.

**TITLE/POP-UP:** Displays the DVD title menu or BD-ROM's pop-up menu, if available.

**REPEAT (↺):** Repeats a desired section or sequence.

..... **2** .....

⏮ / ⏭ (SCAN): Searches backward or forward.

⏮ / ⏭ (SKIP): Goes to the next or previous chapter / track / file.

⏸ (PAUSE): Pauses playback.

▶ (PLAY): Starts playback.

■ (STOP): Stops playback.

..... **3** .....

**HOME (🏠):** Displays or exits the [Home Menu].

**INFO/MENU (ℹ):** Displays or exits On-Screen Display.

**Direction buttons (▲ / ▼ / ◀ / ▶):** Selects an option in the menu.

**ENTER (⊙):** Acknowledges menu selection.

**BACK (◀):** Exits the menu or returns to the previous screen.

**DISC MENU:** Accesses menu on a disc.

..... **4** .....

**Colored (R, G, Y, B) buttons:** Use to navigate BD-ROM menus. They are also used for [MOVIE], [PHOTO] and [MUSIC] menu.

**TV Control Buttons:** See page 35.

## Battery Installation



Remove the battery cover on the rear of the Remote Control, and insert the R03 (size AAA) battery with + and - matched correctly.

## Home Menu Display

### Using [HOME] menu

The home menu appears when you press HOME (⏠). Use ◀/▶ to select a category and press ENTER (⊙).




- |   |   |
|---|---|
| 1 | [Movie] - Plays video content.            |
| 2 | [Photo] - Plays photo content.            |
| 3 | [Music] - Plays audio content.            |
| 4 | [Settings] - Adjusts the system settings. |

## Playing a file on disc/USB device

### MOVIE MUSIC PHOTO

This player can play video, audio and photo files contained in the disc or USB device.

1. Insert a data disc on the tray or connect a USB device.

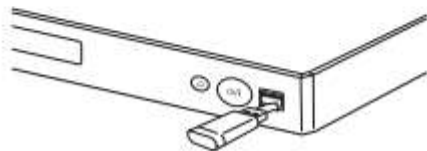

When you connect the USB device on the HOME menu, the player plays an audio file contained in the USB storage device automatically. If the USB storage device is containing various types of files, a menu for the file type selection will appear.

File loading may take few minutes depending on the number of content stored in the USB storage device. Press ENTER (⊙) while [Cancel] is selected to stop loading.

2. Press HOME (⏠).
3. Select [Movie], [Photo] or [Music] using ◀/▶, and press ▼.
4. Select Disc or USB and press ENTER (⊙).

## Playing the Linked Devices

### Playing a Disc

#### BD DVD AVCHD ACD

1. Press ▲ (OPEN/CLOSE), and place a disc on the disc tray.
2. Press ▲ (OPEN/CLOSE) to close the disc tray.  
For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.
3. Press HOME (⏠).
4. Select [Movie] or [Music], and select disc icon.

#### Note

- Playback functions described in this manual are not always available in every files and media. Some functions can be restricted depending on many factors.
- Depending on the BD-ROM titles, a USB device connection may be needed for the proper playback.
- Unfinalized DVD-VR format discs may not be played in this player.
- Some DVD-VR discs are made with CPRM data by DVD RECORDER. This unit cannot support these kinds of discs.

### Notes on USB device

- This player supports USB flash drive/external HDD formatted in FAT32 and NTFS when accessing files (music, photo, movie). However, for Blu-ray contents, only FAT32 format is supported. Use the USB flash drive/external HDD formatted in either FAT32 or NTFS when enjoying Blu-ray contents.
- This unit can support up to 4 partitions of the USB device.
- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Video, audio and photo files can be played. For details of playing each file type, refer to the relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Some digital cameras and mobile phones are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

**MP3 players with a USB connector may be treated as if they are a USB “stick” allowing files to be played as for USB “sticks”**